




# AIRBUS BUS BAR


- 1. AIR LB BUS BAR to feed alternate three-pole breakers.
  - They feed 5 breakers mounted at three points identified as A-B-C.
  - Each BUS BARRE is made of three copper nickel cores and one insulator.
- 2. AIR LB BUS BAR feeds primary breakers and alternate three-pole remote control circuit breakers.
  - They feed 6 and 4 breakers mounted at three points identified as A-B-C.
  - Each BUS BAR is made of three copper-nickel cores and one insulator.

## SECTION 7'

### 1 - AIRBUS A319 - A320 - A321 and ATR

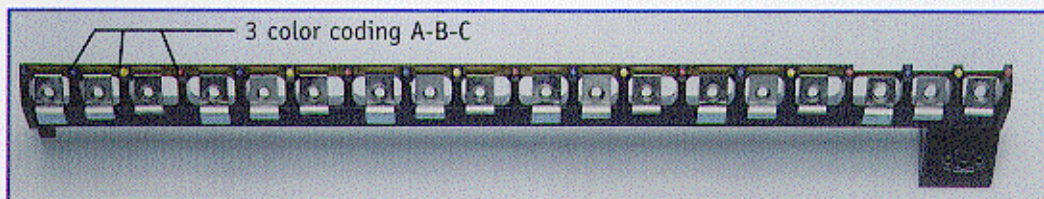

### 2 - AIRBUS A330 - A340

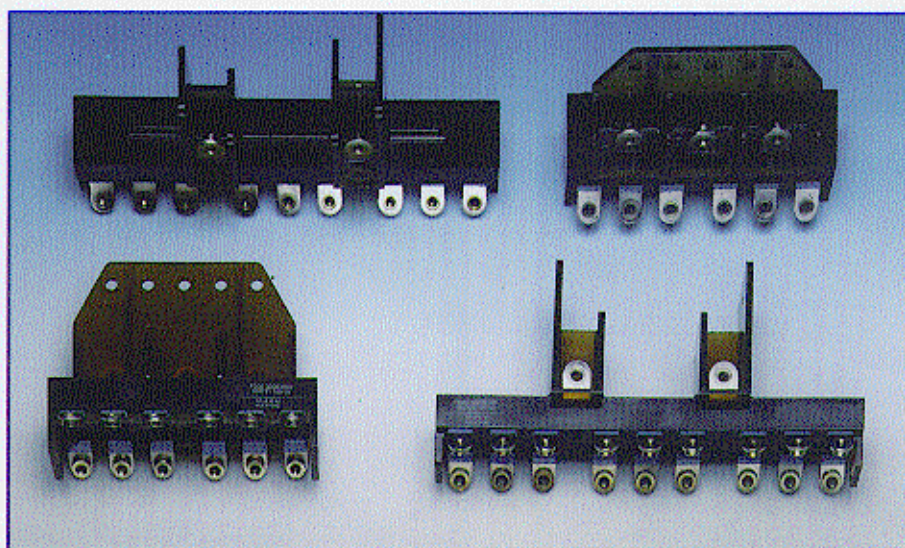

## TECHNICAL DATA

|          |                              |                                |
|----------|------------------------------|--------------------------------|
| <b>1</b> | <b>INSULATING ARMATURE</b>   | : Thermoplastic                |
|          | <b>BARS</b>                  | : Copper plated nickel         |
|          | <b>TEST VOLTAGE</b>          | : 3 000 V - 50/60 Hz           |
|          | <b>INSULATION RESISTANCE</b> | : > 5 000 MΩ                   |
|          | <b>CURRENT CAPACITY</b>      | : 330 A (5 seconds)            |
|          | <b>OPERATING TEMPERATURE</b> | : -55°C + 170°C                |
|          | <b>BREAKER</b>               | : Aerospatiale type NSA 931323 |

|          |                              |                                   |
|----------|------------------------------|-----------------------------------|
| <b>2</b> | <b>INSULATING ARMATURE</b>   | : Thermoplastic                   |
|          | <b>BARS</b>                  | : Copper plated nickel            |
|          | <b>TEST VOLTAGE</b>          | : 3 000 V - 50/60 Hz              |
|          | <b>INSULATION RESISTANCE</b> | : > 5 000 MΩ                      |
|          | <b>CURRENT CAPACITY</b>      | : 250 A (5 seconds)               |
|          | <b>OPERATING TEMPERATURE</b> | : -40°C + 105°C                   |
|          | <b>BREAKER</b>               | : Aerospatiale type ASN E 733-005 |



295 Kesmark  
Dollard-des-Ormeaux,  
Quebec, Canada H9B 3J1  
Tel.: (514) 421-2153  
Fax: (514) 421-3408  
www.air-lb.ca